

**Cordless - No Drill**

**CONTENTS**

**Getting Started**

- Suggested Tools ..... 1
- Included in your package ..... 2

**Installation** ..... 3-5

**Operating:**

- Operating the Shade ..... 6

**Questions?**

- Contact your dealer

**Thank you for choosing our Honeycomb Shade for your Home or Office.**

We are confident that you will find these cellular shades to be of superior quality and value, compared to other shades available.

 
In this guide, you will find useful information about installation, child safety, cleaning and warranty when using our shades.

**READ ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLATION**

**Contacting Us**

Contact your dealer regarding any questions or concerns about your product.


**SUGGESTED TOOLS** (not included)




**LEVEL**



**PENCIL**

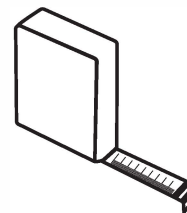


**TAPE  
MEASURE**

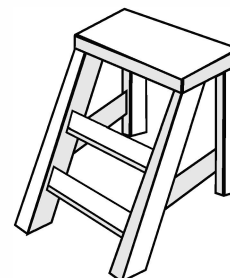

**LADDER**


INCLUDED IN YOUR PACKAGE

Honeycomb Cordless No Drill Shade

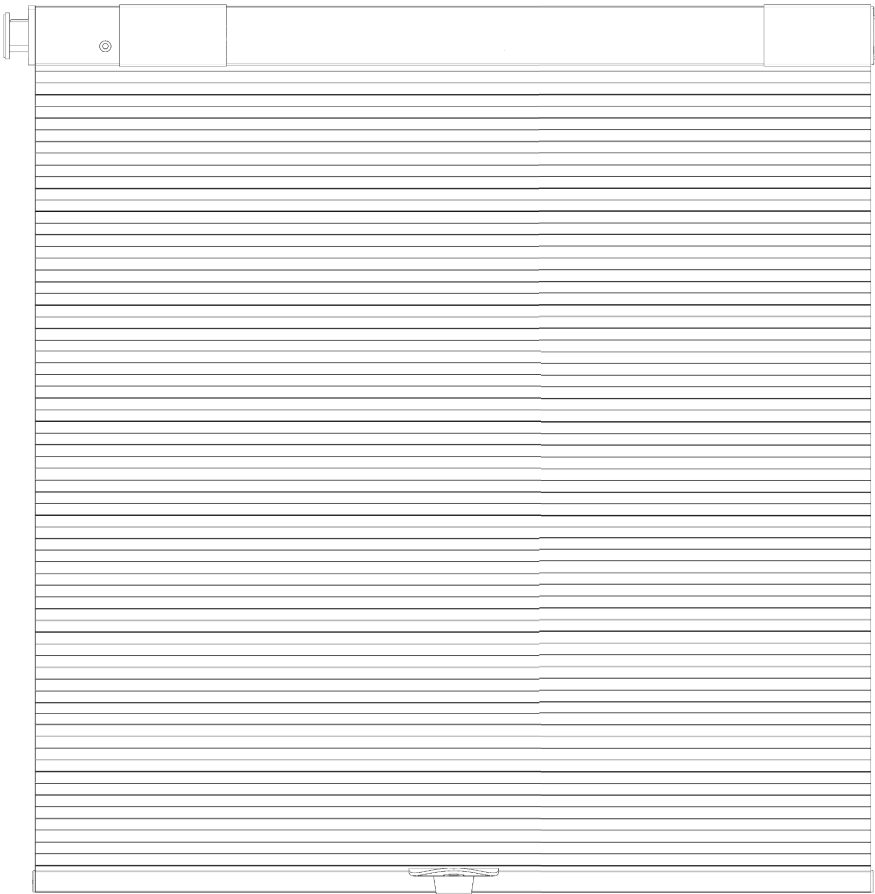


Pull Clip

 Quantity: 1  
Used to pull and push the shade up and down.



Allen Wrench

 Quantity: 1  
Used to pull and push the shade up and down.



THINGS TO CONSIDER BEFORE YOU BEGIN YOUR INSTALLATION



Your new shade is custom made to your specifications from the finest fabrics available. The installation should be easy and your shade will look elegant.

Mounting


Inside mount only: Shade is mounted inside to the top of the window frame.

Installation


Install the plunger side (Left) first.

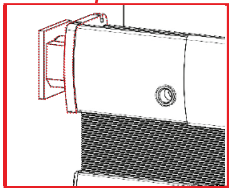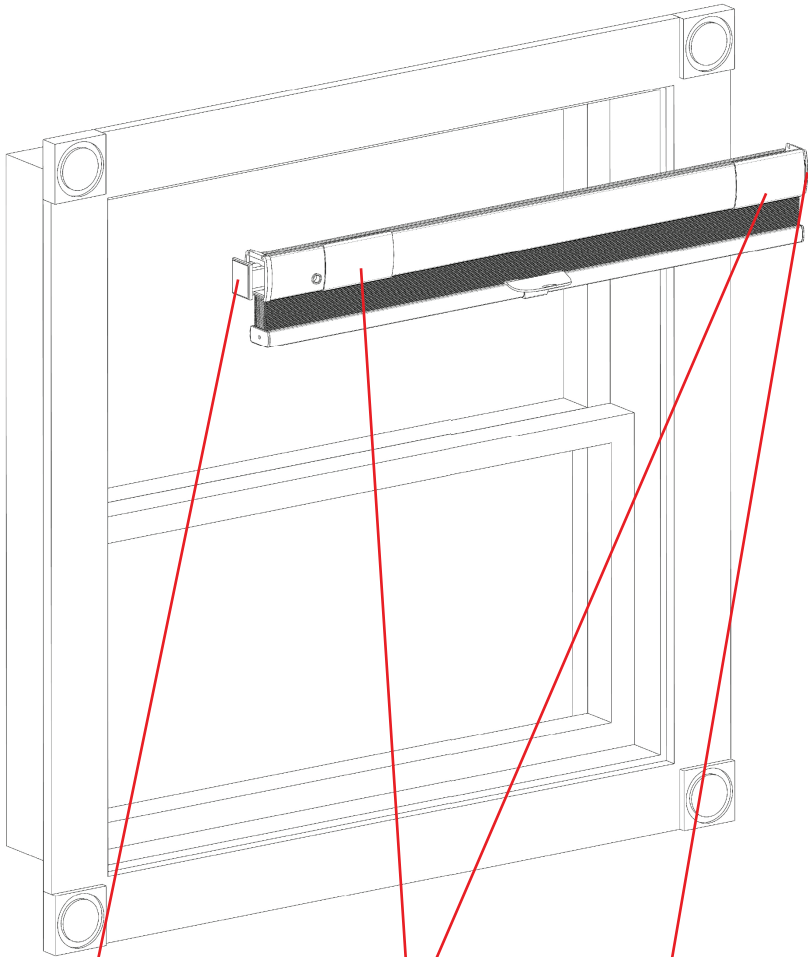

End Cap Plunger (Left)

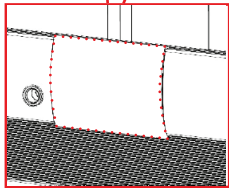


Shroud

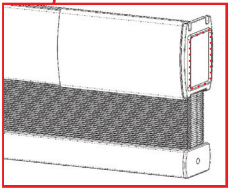


End Cap Grip (Right)


1. Push the plunger in firmly so the End Cap Grip (right) of the shade fits into the window frame.

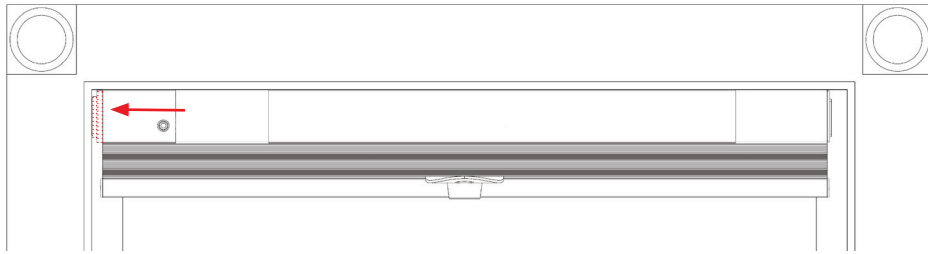


2. Allow the plunger to extend so the shade is flush with the top edge of the window.

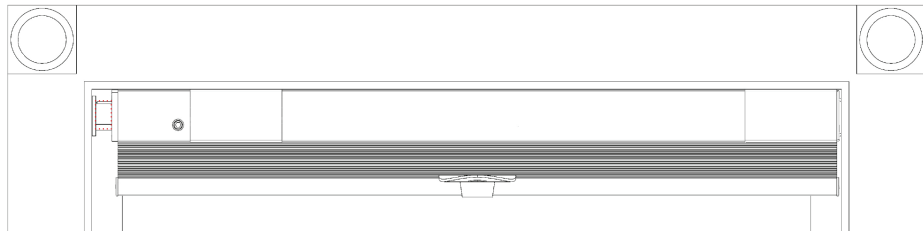

3. Using the provided Allen wrench, tighten the plunger by turning the wrench in the hole clockwise to secure the shade in place.

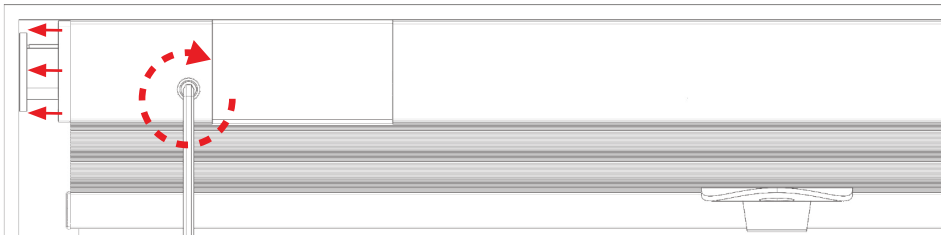

4. Slide the shrouds on the right and left of the headrail to cover the Allen wrench hole and the end cap grip.

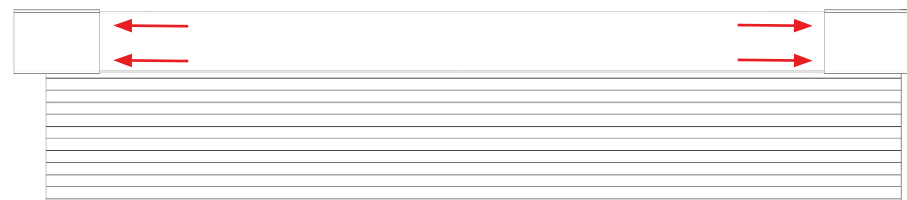


## INSTALLATION OF PUSH AND PULL CLIPS


Your Cordless Cellular Shade comes with a clip used to raise and lower your shade.




Center the clip on the on the bottom shade rail. The flat side of the clip should be facing up with the clip arms facing the rail. Rotate the clip so that the two teeth can slip over the rail edge to catch a metal lip on the top side of rail.

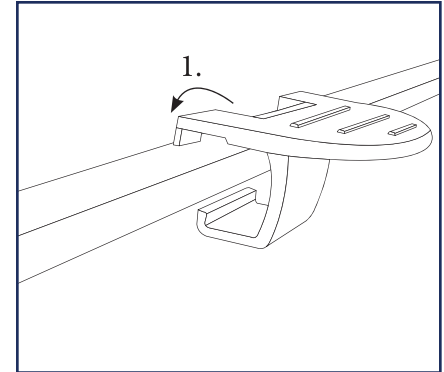

Once the teeth catch the lip on the top side of the rail while making sure the clip is resting against the rail, firmly push on the arm.

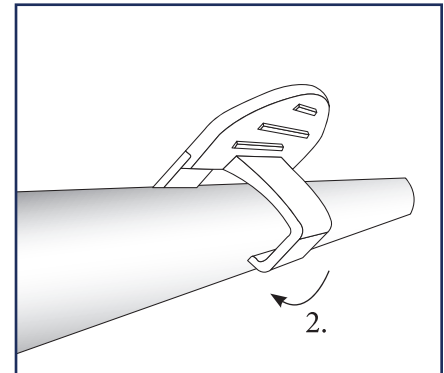

The arm will begin to flex and will slip below the bottom of the rail. The arm will catch the lip in a channel on the bottom of the rail. The clip will snap into place and will be ready to help raise or lower the shade.

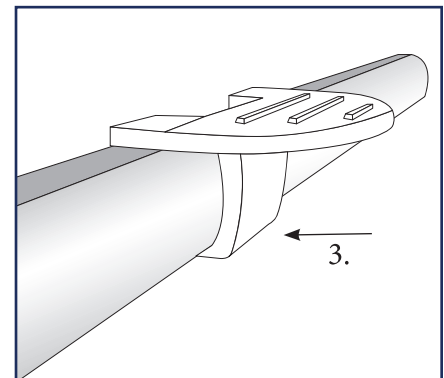


## OPERATING THE SHADE

- To close the shade gently pull the tab on the bottom rail down to the desired height.
- To open shade gently push bottom rail all the way to the headrail or to desired height.



## FACTS ABOUT YOUR CELLULAR SHADE:

- **The Cells:** Because of the D-shaped design, the fabric will maintain its pleated design no matter how long it is used, within warranty specifications.
- **Light Filtering Fabric:** Light Filtering Fabric softens the light distributed through the room.
- **Room Darkening Fabric:** The internal layer of aluminum within the cell blocks up to 99% of outside light.
- **Structure of the Cell:** The hollow structure of the cell promotes energy efficiency and keeps sound entering at a softer volume.
- Cleaning is as simple as running a light duster over the surface.

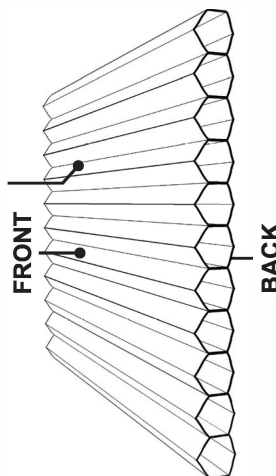

## Window Blind Cord Strangulation Risk

A damaged, loose, or missing tension device poses a strangulation risk to children. Remove from use and repair or replace if tension device is damaged, loose, or missing.

## IMPORTANT SAFETY WARNING:

Window cords can pose a potential strangulation hazard to young children. According to the U.S. Consumer Product Safety Commission, corded window coverings are among the top five hidden hazards in American homes. Check your window coverings for exposed or dangling cords and retrofit or replace them with today's safer products.

Never place a crib, playpen, bed or any type of low-standing furniture near a window. In exploring their surroundings, young children can accidentally fall through an open window or window screen, or become tragically entangled in a nearby window cord. Whenever possible, place cribs and furniture on a non-windowed wall.

Dangling or accessible cords on window coverings can pose an accidental strangulation hazard to infants and young children. For your safety, replace older corded window coverings with today's safer products.

The Window Covering Safety Council (WCSC) and government safety officials recommend that you only use cordless window products in homes with young children.

## CHOKING HAZARD:



- Keep cord out of reach from children.
- Remove objects below window.
- Do not tie cords together.
- Make sure safety cords are located 1-2 inches below the headrail.
- Please reference all warning tags in the instructions and on the shade.
- Please keep cords out of children and pets reach, a cord cleat or a cord tensioner device can be found at a local window covering store.



## EMERGENCY / FIRST AID

- Remove cord from child's neck
- Call 911 or an Emergency Call Center
- Clear the throat
- Check breathing and heartbeat
- Begin CPR if trained

THIS PRODUCT IS...

