 
# Skyline Installation


### 1. MOUNT THE BRACKETS.

 
Attach the brackets to the window frame, window molding, wall or ceiling, as shown.

Brackets are universal so clutch may be mounted on either side.

Note: If sharing a standard bracket between two shades, bracket can only be shared by a clutch and a pin end, not clutch-to-clutch or pin end-to-pin end. If sharing an intermediate bracket it can only be shared by two pin ends







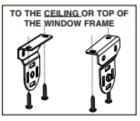

### 2. INSTALL THE SHADE

- Put the spring loaded pin end into the round hole of the bracket.
- b. Keeping the pin end secured in its bracket, insert the hooks on the clutch straight into the two slots in the bracket. Once the two hooks are through the slots, gently pull down on the clutch until the two hooks have locked securely to the bracket. The bottom of the clutch should point straight down.

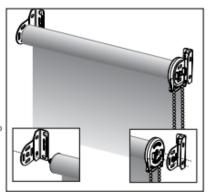

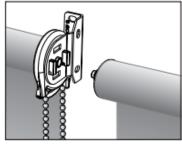

Note: If sharing a bracket between two shades, bracket can only be shared by a clutch and a pin end, not a clutch-to-clutch or pin end to pin end.


### 3. INSTALL THE BRACKET COVERS

 Bracket covers slide over the bracket until snapped into position.

### 4. INSTALL THE TENSION DEVICE

See details page SL22







### 5. USE THE CONTROL CORD OR BEAD CHAIN TO OPERATE THE SHADE.

Pulling gently on the cord in one direction raises the shade; pulling it in the other direction lowers it.

### 6. ATTACH STOPS TO A CONTROL CORD THAT'S MADE OF BEAD CHAIN.

On metal bead chain, attach a metal stop ball that is at least 5/16" (8mm) in diameter, so that it touches the clutch when the shade is in the fully raised position.

For metal or plastic bead chain, lower the shade to its fully lowered position, and attach the appropriate metal stop or plastic connector next so that it touches the clutch, this prevents the shade from being lowered beyond that point.

# Installation Instructions 1-1/4" (32mm) Single System (Inside & Outside Mount)

Step 8. Install Mounting Brackets & Headrail (Mounting brackets should be installed every 18" starting from no more than 2" in from the end of the headrail)

### For Headrail RE0080110

### Inside Mount











### For Headrail RE0080810

Inside Mount







 




For Cassette 100 & 120

Cassette 120 shown Mounting brackets for Cassette 100 are slightly different

**Outside Mount** 










Step 9. To Adjust spring and stop: 9a. Brackets with adjuster wheel 9b. Brackets without adjuster wheel






Stop: Turn Clockwise to lower stop, and counterclockwise to raise

Spring: Use screwdriver and turn Clockwise to increase the speed of the shade, and counterclockwise to reduce the speed the shade goes up.

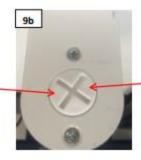

Stop: Use screwdriver and turn Clockwise to lower stop, and counterclockwise to raise stop

## **TENSION DEVICE**

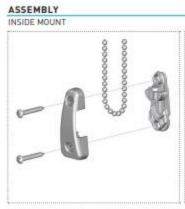



### OUTSIDE MOUNT



 






### DIMENSIONS





# AUTOMATE WIRFREE S35 MOTOR

# **HOW TO CORRECTLY CHARGE YOUR MOTOR**

# Plug charger into motor A green light will appear, this confirms connection is made between motor & charger.

