

InMotion™ Tips and Tricks

For more information visit LEVOLOR.com/InMotionSupport

REMOTE PROGRAMMING

SELECT A CHANNEL

Use channel 0 to control all channels together.

1. Press the - button on the remote to select a lower channel.
2. Press the + button on the remote to select a higher channel.

PAIR REMOTE TO BLIND OR SHADE

1. Use the - and + buttons to select the channel to pair.
2. Press and hold the programming button on the motor (about 2 seconds) until the motor jogs x 1 and/or beeps x 1.
3. In the next 10 seconds, press and hold the  stop button on the remote until the motor jogs x 2 and/or beeps x 3.

NOTE: Repeat steps 1-3 to unpair remote.

HIDE UNUSED CHANNELS

1. Select a channel other than 0, then press and hold the - and + buttons simultaneously until remote control displays "C" then "15", then release buttons.
2. Press the - or + buttons until the number of visible channels needed is shown (between 1 and 15).
3. Press the  stop button to confirm selection. The screen will display "o" once to confirm selection.

NOTE: Repeat steps 1-3 to unhide channels.

DISABLE LIMIT SETTING

After all programming is complete, lock the remote to prevent accidental or unintended changes to motor direction, travel limits, and operating mode.


1. Remove cover from back of remote and locate the lock switch between the P2 buttons above batteries.
2. Move the switch to the left to lock. Remote will display "L" (lock).
3. Move the switch to the right to unlock and access all remote functions. Remote will display "U" (unlock).

ADD OR REMOVE ADDITIONAL REMOTE

Channels can be copied to an additional remote as an exact duplicate of the current remote programming.

1. On the current remote, select the channel to copy then press one P2 button in the battery compartment of the remote until motor jogs x 1 and/or beeps x 1.
2. Once more, on the current remote, press one P2 button in the battery compartment of the remote until motor jogs x 1 and/or beeps x 1.
3. On the new remote, select the channel to copy to then press one P2 button in the battery compartment of the remote until motor jogs x 2 and/or beeps x 3.

NOTE: Repeat steps 1-3 to remove additional remote control.

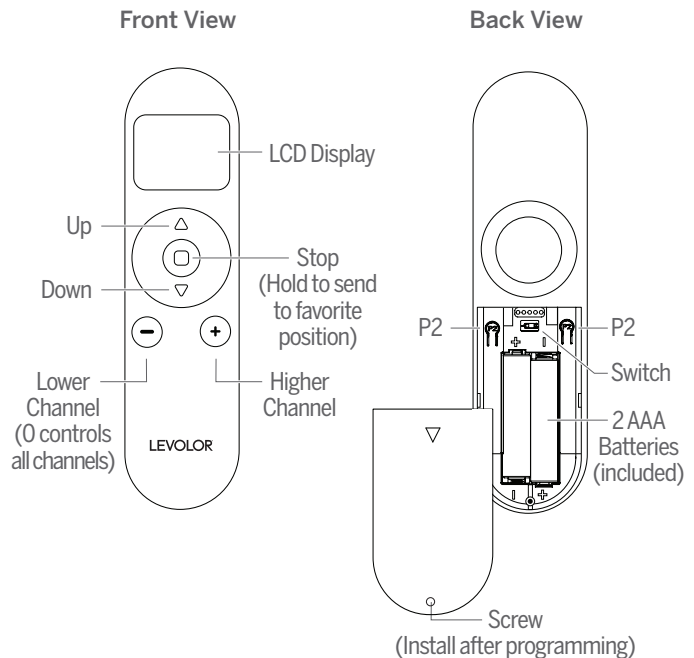

FAVORITE POSITION

To send to favorite position, press and hold the  stop button.

To create a new favorite position, you must first delete the existing favorite position. This procedure will set the favorite position on all blinds and shades assigned to a channel.

DELETE FAVORITE POSITION

1. Use the - and + buttons to select the channel to delete the favorite from.
2. Press one P2 button in the battery compartment of the remote until motor jogs x 1 and/or beeps x 2.
3. Press and hold the  stop button on the remote until the motor jogs x 1 and/or beeps x 1.
4. Press and hold the  stop button on the remote again, until the motor jogs x 1 and/or beeps x 1.

SET FAVORITE POSITION

1. Use the  up and  down buttons to move blind or shade to the desired position.
2. Press one P2 button in the battery compartment of the remote until motor jogs x 1 and/or beeps x 2.
3. Press and hold the  stop button on the remote until the motor jogs x 1 and/or beeps x 1.
4. Press and hold the  stop button on the remote again, until the motor jogs x 2 and/or beeps x 3.

InMotion™ Tips and Tricks - Continued

For more information visit LEVOLOR.com/InMotionSupport

MOTOR OVERVIEW

During programming, all blinds and shades will jog by moving slightly down and up. Banded, roller, and sheer shades will both jog and provide an audible beep.

Certain programming functions will affect all blinds and shades on the selected channel such as – favorite position, travel limits, operating mode, and motor speed. To program individual blinds/shades: pair the blind/shade to its own channel or put all other blinds/shades into sleep mode.

To sleep Blinds: Disconnect battery

To sleep Shades: Press and hold programming button for 6 seconds until the motor jogs x 2. Wake shade by pressing the programming button for less than 1 second.

OPERATING MODE

This procedure will set the operating mode on all blinds and shades assigned to a specific channel.

All blind and shade motors can be set to two different operating modes.

CONTINUOUS MODE (DEFAULT SETTING)

Recommended for cellular, natural, roller, and roman shades.

Motor continues to move after a short press of the $\triangle$ up or ∇ down arrow buttons until the $\square$ stop button is pressed or until the limit is reached.

1. Press and hold (about 5 seconds) the $\triangle$ up and ∇ down buttons simultaneously until the motor jogs x 1.
2. Press and hold (about 2 seconds) the $\square$ stop button until the motor jogs x 2 and/or beeps x 3.

INTERMITTENT MODE

Recommended for banded shades, sheer shades, and wood blinds.

Motor moves a small amount after a short press of the $\triangle$ up or ∇ down buttons and continues to move after a long press of the $\triangle$ up or ∇ down buttons until the $\square$ stop button is pressed or the limit is reached.

1. Press and hold (about 5 seconds) the $\triangle$ up and ∇ down buttons simultaneously until the motor jogs x 1.
2. Press and hold (about 2 seconds) the $\square$ stop button until the motor jogs x 1 and/or beeps x 1.

MOTOR SPEED

All motors have 3 speeds available and are set to the slowest speed by default. This procedure will set the motor speed on all blinds and shades assigned to a channel.

MOTOR SPEED (CONTINUED)

SET TO FASTER SPEED

1. Press one P2 button in the battery compartment of the remote until motor jogs x 1 and/or beeps x 1.
2. Press the $\triangle$ up button until the motor jogs x 1 and/or beeps x 1.
3. Press the $\triangle$ up button again until the motor jogs x 2 and/or beeps x 1.

SET TO SLOWER SPEED

1. Press one P2 button in the battery compartment of the remote until motor jogs x 1 and/or beeps x 1.
2. Press the ∇ down button until the motor jogs x 1 and/or beeps x 1.
3. Press the ∇ down button again until the motor jogs x 2 and/or beeps x 1.

NOTE: If the motor has no response, it is already on the fastest or slowest speed.

TRAVEL LIMITS

This procedure will adjust the travel limits on all blinds and shades assigned to a channel.

Upper and lower travel limits are set at the factory during production to your order specification. Upon installation, adjustment of these limits may be necessary to better suit your needs.

Take care adjusting limits to avoid damage to product. Lower limits cannot be adjusted on sheer shades.

NOTE: If you exit programming before you finish adjusting the travel limits, the motor will take the previous limits

ADJUST THE UPPER LIMIT

1. Use the - and + buttons to select the appropriate channel.
2. Press and hold the $\triangle$ up and $\square$ stop buttons simultaneously for about 5 seconds until the motor jogs x 1 and/or beeps x 1.
3. Use the $\triangle$ up and ∇ down buttons to raise the blind or shade to the desired highest position.
4. Press and hold the $\triangle$ up and $\square$ stop buttons simultaneously for about 5 seconds until the motor jogs x 2 and/or beeps x 3.

ADJUST THE LOWER LIMIT

1. Use the - and + buttons to select the appropriate channel.
2. Press and hold the ∇ down and $\square$ stop buttons simultaneously for about 5 seconds until the motor jogs x 1 and/or beeps x 1.
3. Use the $\triangle$ up and ∇ down buttons to lower the blind or shade to the desired lowest position.
4. Press and hold the ∇ down and $\square$ stop buttons simultaneously for about 5 seconds until the motor jogs x 2 and/or beeps x 3.