

Read all instructions before starting installation.

**NOTE:** The No-Drill Headrail System will come with the shade installation brackets already attached. No drilling is necessary to install this shade. A Flat Head Screwdriver is needed to remove the No-Drill Headrail System.

### TOOLS NEEDED



 
Flat Head Screwdriver (for removal only)




Level

1

**PLACE THE NO-DRILL HEADRAIL SYSTEM IN THE WINDOW FRAME SO THAT THE END WITH THE LEVER IS UP TIGHT AGAINST THE WINDOW FRAME**

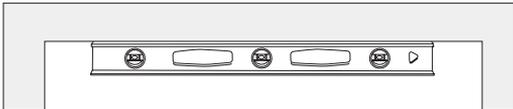

Make sure mounting surface is level

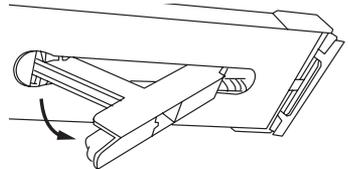


Release locking lever

## 2

### ADJUST THE NO-DRILL HEADRAIL WIDTH AS NEEDED


**IMPORTANT:** If you're installing on a smooth surface—such as painted aluminum or tile—apply the included double-sided adhesive to both end caps before mounting to help keep the no-drill system secure. Simply remove the liner from one side of the adhesive, press it firmly onto each end cap, and ensure it's well adhered before installation.

- If there is a gap at the non-lever end of the rail, simply slide the end cap until it touches the window casing.
- See Step 5 for End Cap Adjustment if you accidentally pull the end cap out too far.
- If mounting on a smooth surface, remove the release liners from the double-sided adhesive on the endcaps. Replace mounting system.

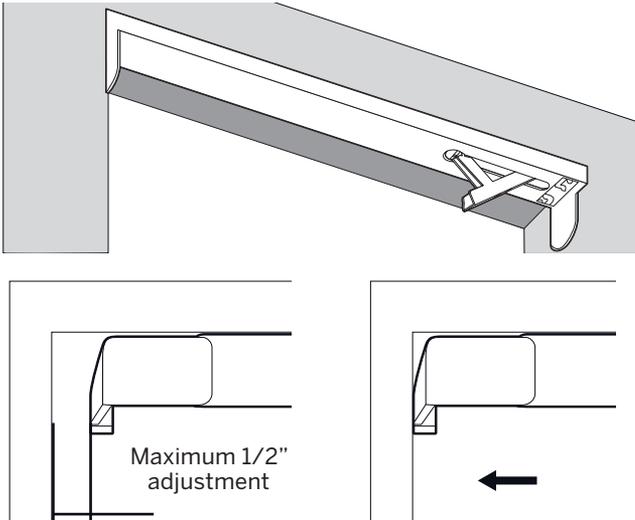

## 3

### LOCK NO-DRILL HEADRAIL SYSTEM INTO PLACE

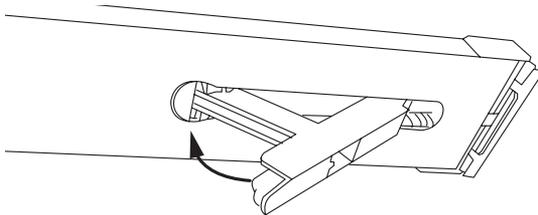


Make sure that the mounting system is level. Press up on the lever to lock the mounting system in place.

## 4 ATTACH THE SHADE ONTO THE NO-DRILL HEADRAIL BRACKETS

**Cellular:** With the front of the shade facing you, tilt the headrail slightly backward to angle the front of the headrail on the front lip of the brackets.


Push the headrail up and back until you hear a click. This will let you know the shade is engaged in the brackets.

**IMPORTANT:** Be sure the front tabs of the bracket are seated in the slot at the front of the headrail.

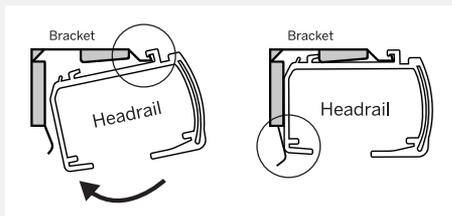

**Roller and Banded:** With the front of the shade facing you, rotate the headrail upward until the front edge of the headrail engages with the bracket.


Secure the back of the cassette into the bottom of the bracket, then rotate the headrail up until you hear a click. This confirms the shade is locked into place.

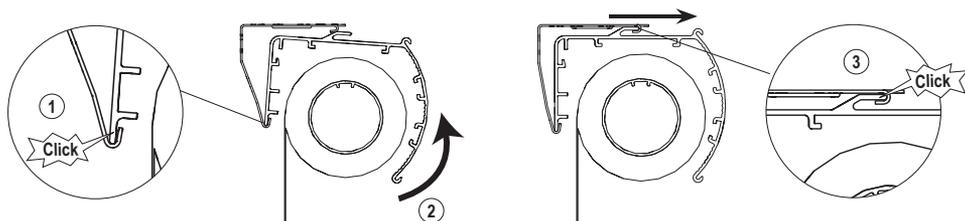

## 5 ADJUSTING MOVEABLE END CAP

The moveable end cap is designed to only pull out without tools. If for some reason the end cap needs to be compressed you will need a small flat head screwdriver.

- 1 Use the screwdriver to turn the locking tab release screws as shown.
- 2 Push the end cap in.
- 3 Return the locking tabs to their original position.

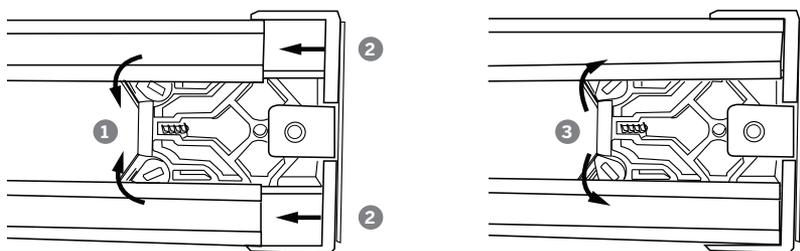


## REMOVAL OF THE NO-DRILL HEADRAIL SYSTEM

**IMPORTANT:** Remove the shade from the No-Drill Headrail System following the instructions in the installation guide available at [levolor.com/installation](http://levolor.com/installation).


**CAUTION:** Lever will release abruptly. Keep hand clear of lever.

Hold the mounting system secure with one hand. Use a flat head screwdriver to pry open the locking lever.

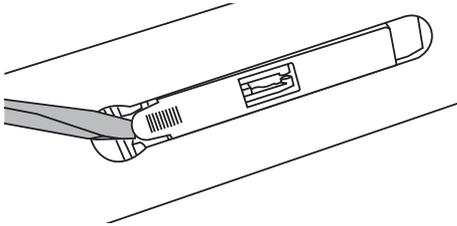

## CHILD SAFETY

# ! WARNING ! ADVERTENCIA

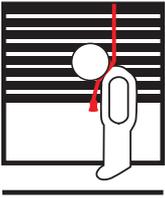

### Window Blind Cord Strangulation Risk

Window blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.

### Riesgo de Estrangulamiento en Cuerdas de Persianas

Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retráctable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccesibles.