
# Micro (1/2”) Standard Cordless Aluminum Blind Installation and Care Instructions

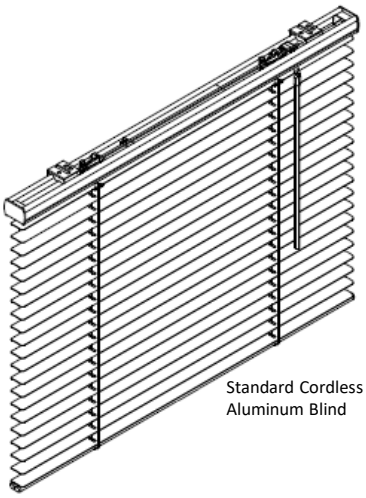


Standard Cordless Aluminum Blind


**1. Identify your aluminum blind and parts** (your parts may vary, depending on the custom request & size of the blind you are purchasing.




Wand

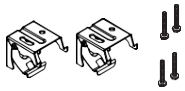


Hidden brackets & screws

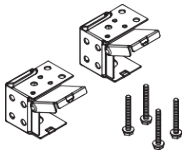


Box brackets & screws (optional)

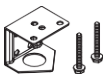


Center support & screws (optional with the box brackets, used on the larger blinds)

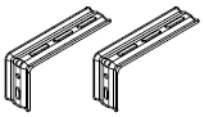

Extension brackets (optional)

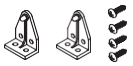

Hold down brackets & screws (optional)

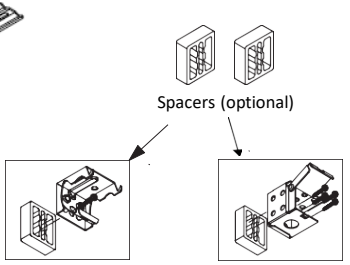

Spacers (optional)

Optional - Add a spacer behind the hidden bracket or the box bracket if needed.


**2. Tools you may need** (not included)

- Drill with bits
- Screwdriver
- Metal tape measure
- Pen




**3A. Install the blind with the hidden brackets** (or choose to install the blind with the box brackets, refer to step 3B~5B.)

- Mark the bracket locations, making sure the brackets will not interfere with any mechanism or other internal headrail parts. The outermost brackets should be installed about 1/4 inch from each end of the blind. If you have more than 2 hidden brackets, install all remaining brackets towards the center of the blind.
- Install the brackets using screws (included) and tighten them completely.
- Make sure all brackets are aligned and level with each other.

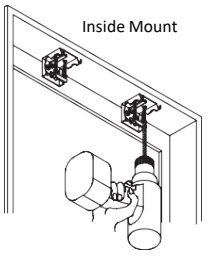


Inside Mount

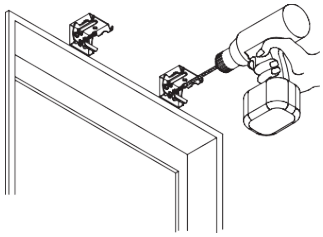


Outside Mount


- Install the blind with the extension brackets (optional)
  - Install the extension bracket with at least 2 screws.
  - Attach the hidden brackets to the extension brackets with the screws.

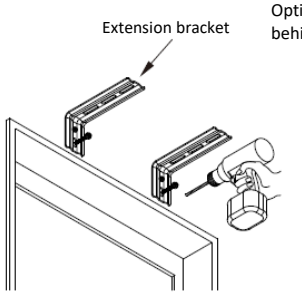

Extension bracket


Optional - Add a spacer behind the bracket if needed.

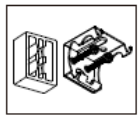

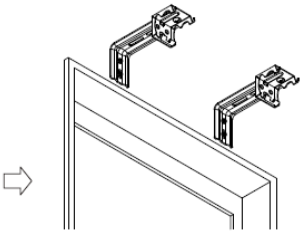


**4A. Install the blind**

- Fit the front lip of the headrail over the hook on the front of the hidden brackets.
- Push the blind toward the back of the brackets with a "click".

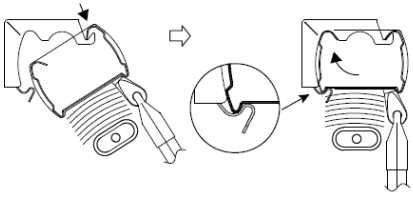


**5A. How to remove the blind from the hidden brackets**

- Unlock the hidden brackets with a flat head screwdriver.

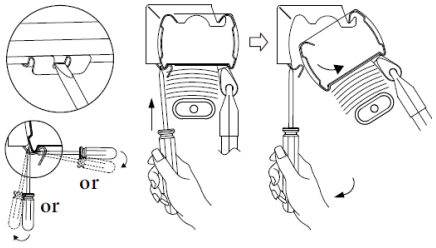


**3B. Install the blind with the box brackets** (or choose to install the blind with the hidden brackets, refer to step 3A~5A.)

- Install the box brackets at the ends of the headrail. Use 2 screws per box bracket.
- One center support is applied when the blind is wider than 48"W, or two center supports for the blind wider than 100"W.
- The spacer is optional and is installed behind the box bracket when needed.

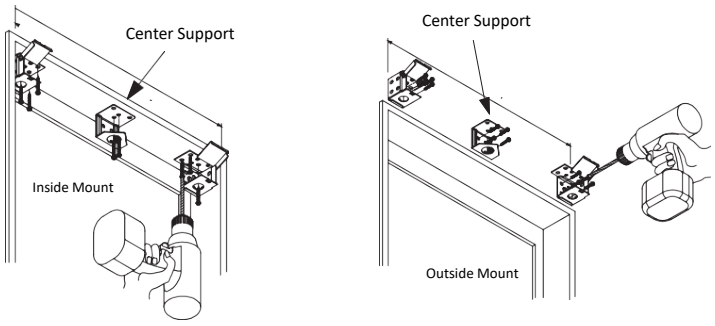



**4B. Install the blind**

- Unlock the box brackets with a flat head screwdriver.
- Mount the blind in the brackets (also use the center support when blind is wider than 48"W)
- Close the door on the bracket and hear a "click".

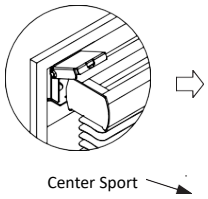



**5B. How to remove the aluminum blind from the box brackets**

- Use a flat head screwdriver to open the door of the box bracket.
- Remove the blind.

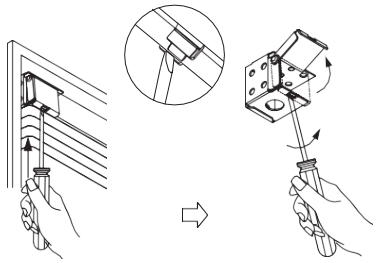


**6. Attach the tilt wand**

- Attach the tilt wand onto the wand hook located on the headrail.

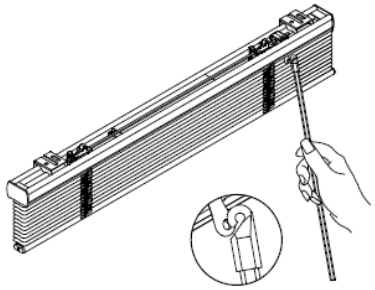


**7. Attach the optional hold down brackets**

- Install the hold down brackets to the wall (for outside mount) or jamb of the window frame (for inside mount), not on the sill of the window frame.
- Tighten the screws.

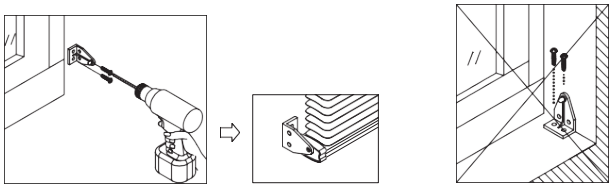

**8. Care and cleaning**

- Wipe the blind periodically with a soft dust cloth or a dusting mitt, or vacuum with a soft brush attachment.
- You may clean the blinds using a non-scratched sponge or dampened soft cloth with a mild nonabrasive detergent. Never use hot water, solvents, or harsh or abrasive cleansers to clean the blinds.
- Note: The warranty for your blinds does not cover damage caused by improper cleaning.

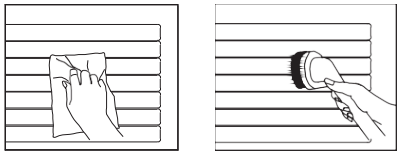

**To Operate Your Blind**

Important: Always tilt the slats to a horizontal position before raising or lowing the blind. This step increases the life of the blind.

**To Lower or Raise Your Blind**

Use 2 hands to lower or raise the bottom rial.

**To tilt The Slats**

Rotate the wand to attain desired slat position.