

How to Install Custom Vertical Blinds

Before you begin your installation:

READ ALL INSTALLATION INSTRUCTIONS!

- Make sure that you have all tools and hardware needed for installation.
- Check the installation surface (wall, ceiling, or window frame) to ensure that you have suitable fasteners and tools for the material.
- Double check the headrail and blinds for proper width and length. If you are installing several sets of blinds, be sure to match them with the appropriate window.
- Check the parts list shipped with the product to confirm that you have the correct number of brackets.

TOOLS YOU MAY NEED (NOT INCLUDED):

- Tape Measure
- Level
- Pencil
- 3/8" Wrench
- Flat-blade or Philips Head Screwdriver
- 1/4" Nutdriver
- Drill with Bits
- Drywall Anchors
- Safety glasses
- Scissors or Utility Knife
- Ladder

OPTIONAL BRACKETS:

Extension Brackets


(Offers clearance for obstructions) Outside-mounting extension brackets will provide 1"-3" clearance between the headrail and mounting surface. Assemble extension bracket as shown.



STEP 1

Mark the bracket locations — outside mount installation

Outside Mount Bracket

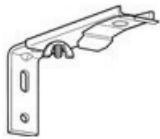

Inside Mount Bracket




Headrail with vane carrier



STEP 1A

Mark the bracket locations — inside-mount installation


- Position one bracket at each end of the headrail, 3" in from the ends.
- Space any remaining brackets evenly, not more than 30" apart.
- Mark the bracket mounting hole locations at the desired height, making sure they are level and square. Allow at least 1/2" clearance for vanes above the floor or sill.

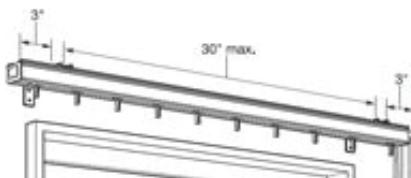

STEP 2A

Install the brackets — outside-mount installation

- If mounting into drywall or plaster, use 3/16" drill bit and insert wall anchors before inserting screws.

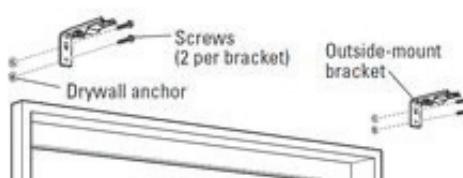


STEP 1B

Mark the bracket locations — inside-mount installation

- Position one bracket at each end of the headrail, 3" in from the ends.
- Space any remaining brackets evenly, not more than 30" apart.
- Mark the bracket locations, making sure they are in a straight line that is parallel to the wall.

Determining the correct distance from the wall or window:


- Position the center of the brackets a minimum of 2-1/2" in front of the window frame or any protruding trim or handles.

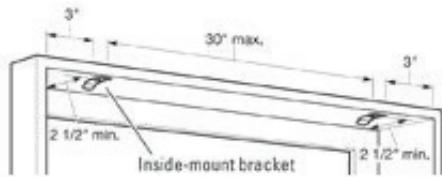

STEP 2B

Install the brackets — outside-mount installation

- If mounting into drywall or plaster, use 3/16" drill bit and insert wall anchors before inserting screws.

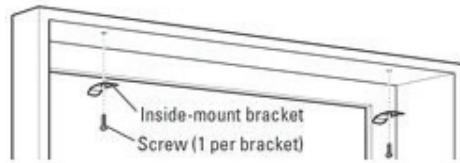


**For models equipped with a valance, the valance mounting clips should be installed to the headrail at this time.
Please refer to the installation instructions included with your valance before proceeding**

STEP 3

Attach the headrail — outside- or inside-mount

- **NOTE: For wide windows and sliding glass doors, two people are recommended for installing the headrail.**
- With the bracket positioned as shown, fit the top front lip of the headrail into the front part of the spring clip.
- Tip the back of the headrail up into the spring clip until it locks with a clicking sound.

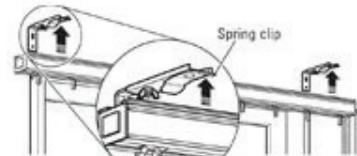


STEP 4

Center the Vane Rotation


Models With Wand

- Attach the wand.
- Rotate the wand so that the vane clips are at a right angle to the window.

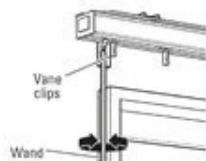

Models with Vane-Rotation Chains


- Adjust the vane-rotation chain so that it is centered (ends of chain should be even). Vane clips should be at a right angle to the window (open position).

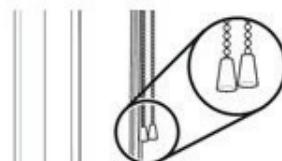

STEP 5



Attach the vanes

- Starting at one end, align the rectangular hole in the vane with the clip.
- Slide the vane fully into the clip; then pull down slightly to lock the hook on the clip into place. Repeat for the remaining vanes, making sure that all vanes are facing in the same direction.

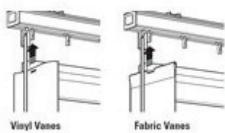

- **Left** – Vanes nest correctly for optimum light control.
- **Right** – Vanes nest incorrectly, preventing optimum light control.


- **Bottom Chains (if ordered)**
- Connect the vanes together with the included clips and chain.

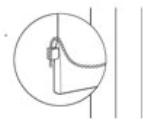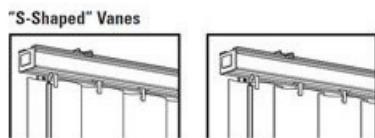

STEP 6

Attach the tension device (cord/chain control only)

Refer to instructions in the hold-down tension device.

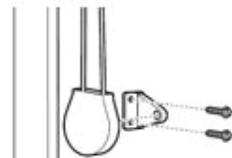

STEP 7

Test the Vane Rotation

Turn the wand or pull the bead chain in alternate directions to ensure that the vanes rotate smoothly in both directions







STEP 8

Test the Traverse

With the vanes in the open position (vanes at a right angle to the window), slide the wand or pull the cord in alternate directions to ensure that the vanes move smoothly in both directions.



Please refer to the valance instructions for your valance style at this time to complete your installation.

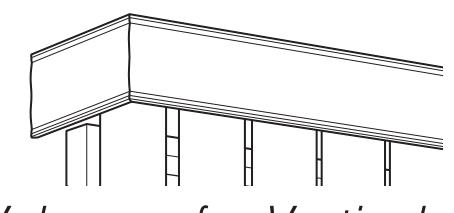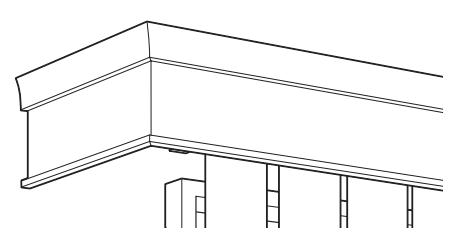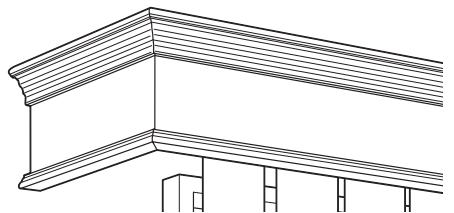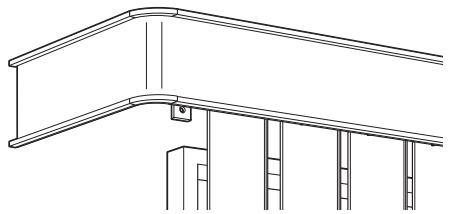

Valances for Vertical Blinds

**Read all
installation instructions
before installing.**

kirsch[®]

Contact Us

Contact Kirsch customer service regarding any questions or concerns you may have about your new window treatment. You may reach us at:

1-800-538-6567 (9:00 a.m. – 6:00 p.m. EST)

www.kirsch.com

Additional Parts and Services


Purchasing extra or replacement parts

Should the need arise, you may have your Kirsch blinds repaired or restrung through our repair center. Please contact Kirsch customer service through www.kirsch.com for a return authorization number.


Valance Styles

The following illustrations show installed examples of some common valance styles. Refer to the installation that matches your valance.


DesignLine™ valance

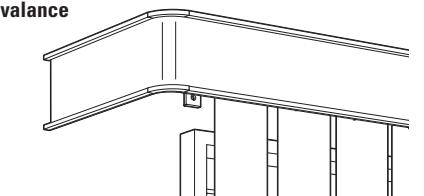


Traditional valance

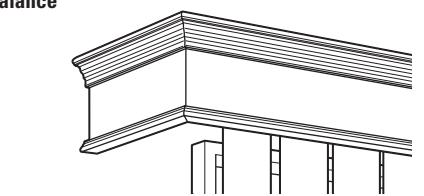

Transitional valance

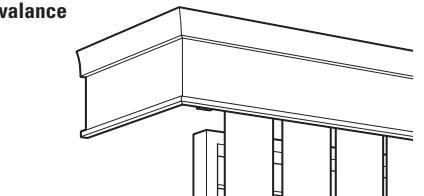

Resemblance™ Faux Wood valance

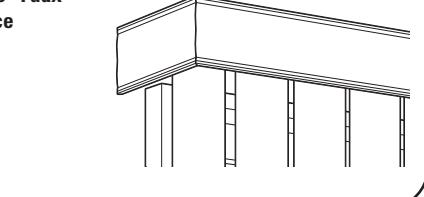


Installing Valance Clips

A


Install the valance clips— DesignLine™, Traditional, and Transitional (outside-mount)

NOTE: Headrail mounting shown in installed position to show typical mounting bracket locations.

- Position one clip at each end of the headrail, next to the headrail mounting bracket locations. Make sure that the clips do not interfere with the mounting brackets.
- Lower the clip into the top channel of the headrail at a 45° angle to the headrail so the locking tabs fit into the channel.

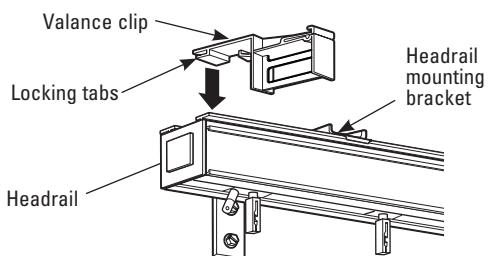

- Rotate the clip in the channel so that it locks into place.

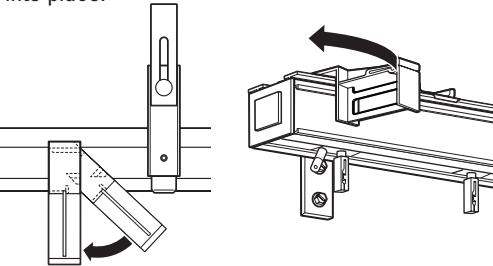


- Space remaining clips evenly between the ends, not more than 30" apart.

B

Install the valance clips— DesignLine™, Traditional, and Transitional (inside-mount)

NOTE: Valance clips must be installed prior to headrail installation.

- Position one clip at each end of the headrail, next to the headrail mounting bracket locations. Make sure that the clips do not interfere with the mounting brackets.
- Lower the clip into the top channel of the headrail at a 45° angle to the headrail so the locking tabs fit into the channel.
- Rotate the clip in the channel so that it locks into place.

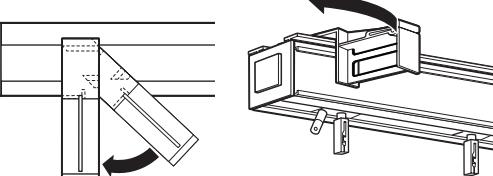


DesignLine™ Outside- and Inside-Mount Installation

Tailored Edge

1

Attach the valance to the headrail


- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until they click into place.

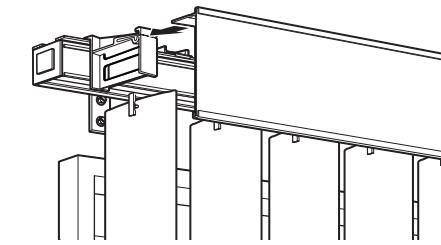

2

Attach the returns (outside-mount)

- Slide the end of the return into the pocket of the corner clip, as shown.
- Slide the corner clip onto the end of the front panel. The top notch will slide over the mounting tab; the lower lip on the bottom notch will slide into the channel on the back of the lower front panel trim.

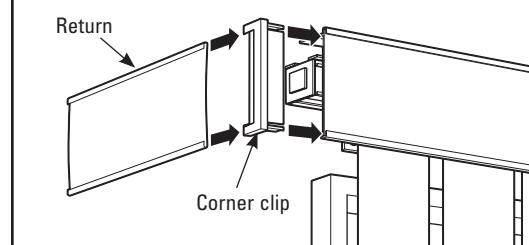


- Repeat for the other return.

Round Edge

1

Attach the valance to the headrail


- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until they click into place.

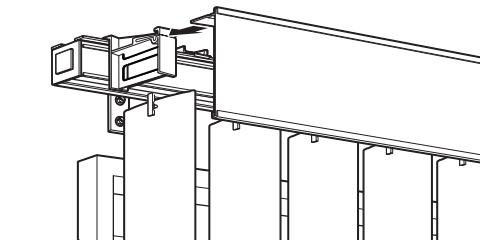

2

Attach the returns (outside-mount)

- Slide the end of the return into the pocket of the corner clip, as shown.
- Slide the corner clip onto the end of the front panel. The top notch will slide over the mounting tab; the lower lip on the bottom notch will slide into the channel on the back of the lower front panel trim.

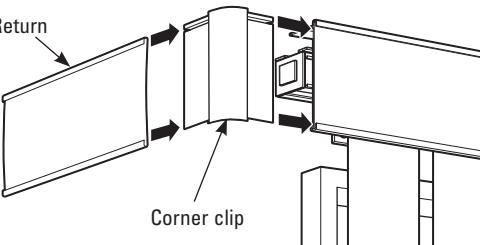


- Repeat for the other return.

Traditional Valance


1A Attach the valance to the headrail (outside-mount)

- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until it clicks into place.

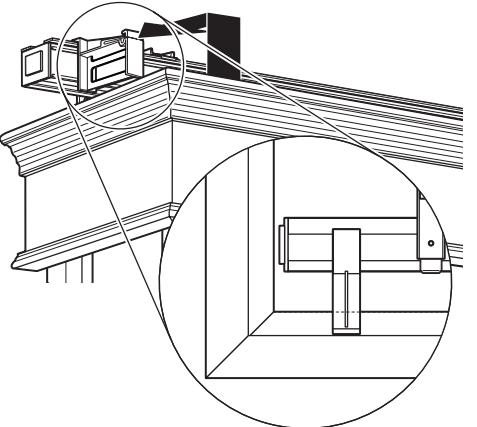

1B Attach the valance to the headrail (inside-mount)


- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until it clicks into place.

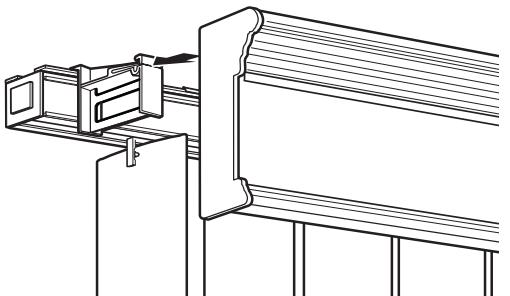

Transitional Valance


1A Attach the valance to the headrail (outside-mount)

- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until it clicks into place.

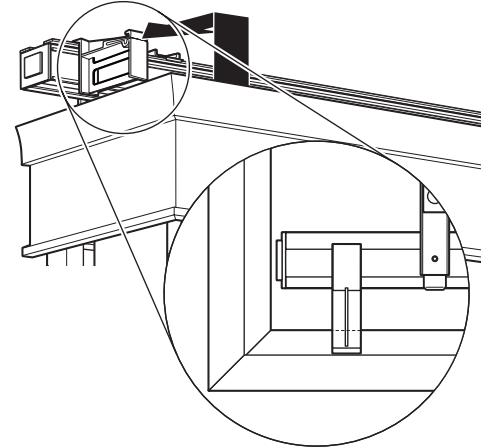

1B Attach the valance to the headrail (inside-mount)


- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until it clicks into place.

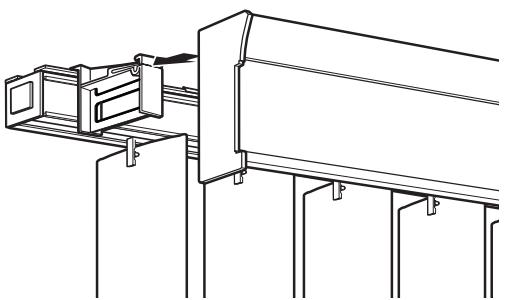

Resemblance™ Valance


1 Install the clips on the valance

- Install a valance clip about 2" in from each end. Space any remaining clips evenly along the length of the valance.
- Insert the clip into the groove on the back side of the valance and then rotate the clip 90°.

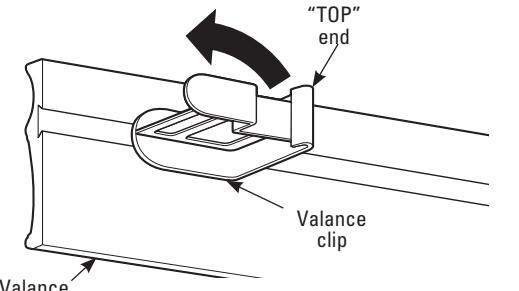


2 Attach the valance to the headrail

- Hook the valance clips onto the front of the headrail. Make sure the hooks fit over the lip of the channel as shown.

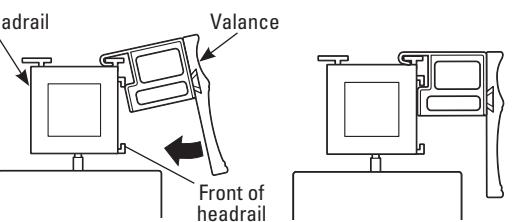






3 Attach the returns (outside-mount)

- Slide a return "L" bracket into the angled end of each return.

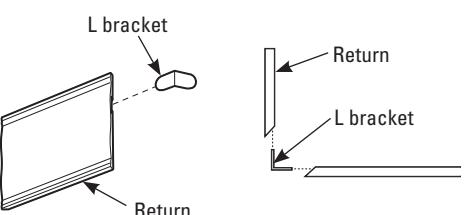

- Press the returns into place on each end of the valance.

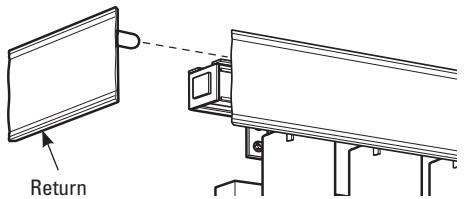

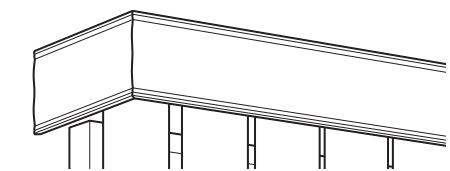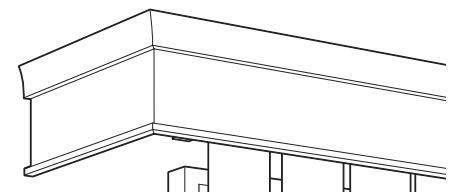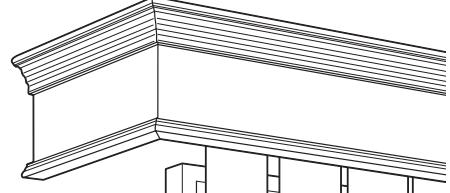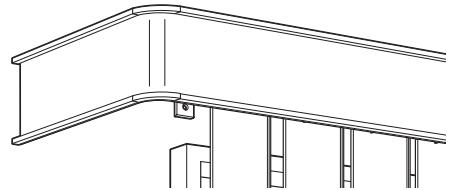

Bastidores para persianas verticales

Antes de iniciar la instalación, lea todas las instrucciones.

kirsch

Para contactar nos

Si tiene alguna pregunta o duda relacionada con su nueva tratamiento de la ventana, póngase en contacto con el servicio de atención al cliente de Kirsch llamándonos al:

1-800-358-6567 (9:00 a.m. – 6:00 p.m. EST)

www.kirsch.com

Piezas adicionales y servicio


- **Compra de piezas adicionales o de reemplazo**

Si es necesario, puede reparar las persianas o cambiar las cuerdas en nuestro centro de reparación. Póngase en contacto con el servicio de atención al cliente de Kirsch en www.kirsch.com para obtener el número de autorización de devolución.

Estilos de bastidores

Las siguientes ilustraciones muestran ejemplos instalados de algunos estilos de bastidores comunes. Consulte la ilustración que se ajuste a su bastidor.


Bastidor DesignLine™

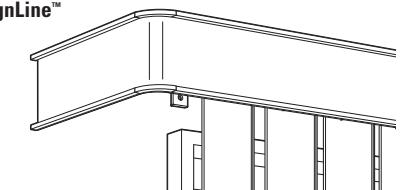

Bastidor Tradicional

Bastidor Transicional

Bastidor Resemblance™ de madera del faux

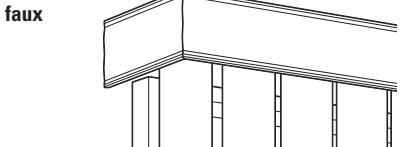


Cómo Instalar los Ganchos para Bastidor

A


Instale los ganchos para bastidor—DesignLine™, Tradicional, y Transicional (instalación exterior)

NOTA: Puede verse el cortinero en la posición de instalación para indicar las ubicaciones típicas de los soportes de montaje.

- Coloque un gancho en cada extremo del cortinero, cerca de las ubicaciones de los soportes de montaje del cortinero. Asegúrese de que los ganchos no interfieran con los soportes de montaje.
- Descienda el gancho en el canal superior del cortinero en un ángulo de 45° respecto del cortinero para que las lengüetas de trabado puedan encajar en el canal.

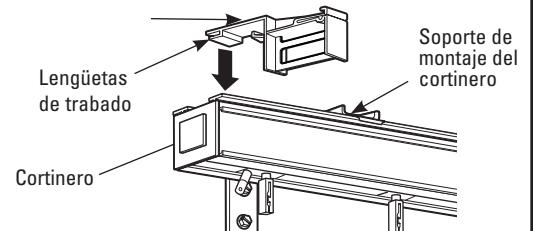

- Gire el gancho en el canal para que se ajuste en su lugar.

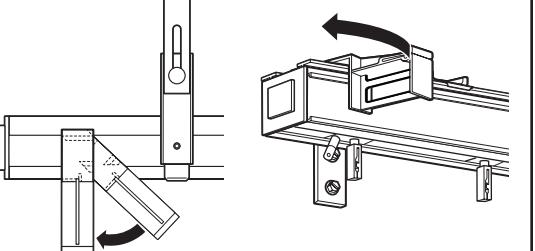


- Coloque los ganchos restantes entre los extremos de manera uniforme, a no más de 30" de distancia.

B

Instale los ganchos para bastidor—DesignLine™, Tradicional, y Transicional (instalación interior)

NOTA: Los ganchos para bastidor debe estar instalado antes de la instalación de cortinero.

- Coloque un gancho en cada extremo del cortinero, cerca de las ubicaciones de los soportes de montaje del cortinero. Asegúrese de que los ganchos no interfieran con los soportes de montaje.
- Descienda el gancho en el canal superior del cortinero en un ángulo de 45° respecto del cortinero para que las lengüetas de trabado puedan encajar en el canal.
- Gire el gancho en el canal para que se ajuste en su lugar.

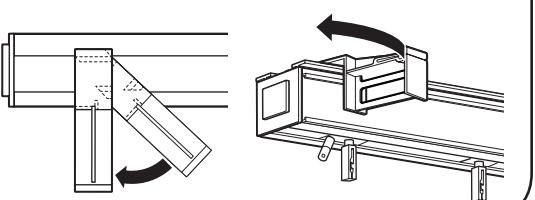


Instalaciones de montaje externo y interno DesignLine™

Esquina a Medida

1

Conecte el bastidor al cortinero


- Centre el panel frontal con el cortinero.
- Deslice la lengüeta de montaje del panel del bastidor frontal dentro de los ganchos para bastidor hasta que encajen en su lugar haciendo "clic".

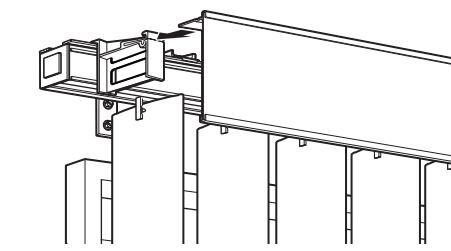

2

Conecte los retornos (instalación exterior)

- Deslice el extremo de un retorno en el bolsillo del gancho de esquina, como puede verse.
- Deslice el gancho de esquina en el extremo del panel frontal. La ranura superior se deslizará sobre la lengüeta de montaje, el reborde inferior de la ranura inferior se deslizará por el canal de la parte trasera del panel frontal inferior.

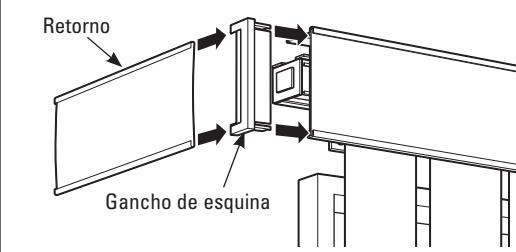


- Repita con el otro retorno.

Esquina Redondeada

1

Conecte el bastidor al cortinero


- Centre el panel frontal con el cortinero.
- Deslice la lengüeta de montaje del panel del bastidor frontal dentro de los ganchos para bastidor hasta que encajen en su lugar haciendo "clic".

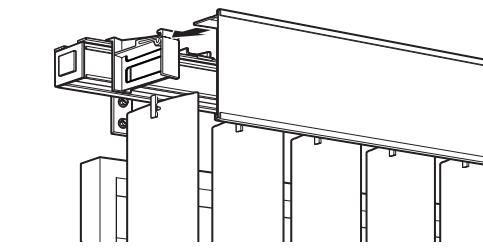

2

Conecte los retornos (instalación exterior)

- Deslice el extremo de un retorno en el bolsillo del gancho de esquina, como puede verse.
- Deslice el gancho de esquina en el extremo del panel frontal. La ranura superior se deslizará sobre la lengüeta de montaje, el reborde inferior de la ranura inferior se deslizará por el canal de la parte trasera del panel frontal inferior.

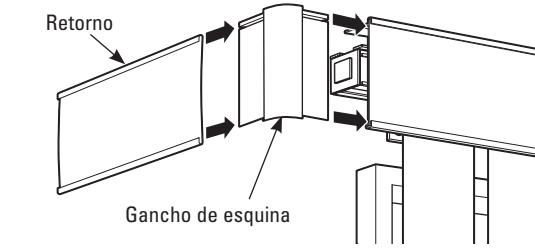


- Repita con el otro retorno.

Bastidor Tradicional


1A Conecte el bastidor al cortinero (instalación exterior)

- Centre el panel frontal con el cortinero.
- Deslice la lengüeta de montaje del panel del bastidor frontal dentro de los ganchos para bastidor hasta que encajen en su lugar haciendo "clic".

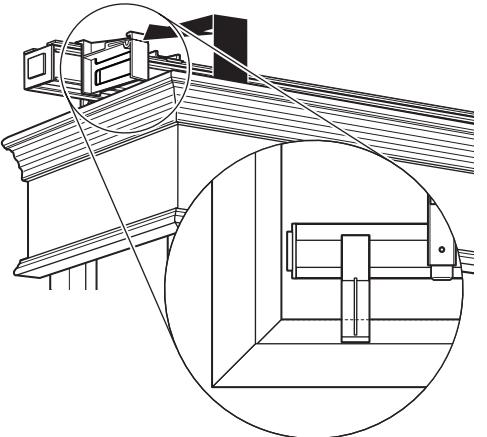

1B Conecte el bastidor al cortinero (instalación interior)


- Centre el panel frontal con el cortinero.
- Deslice la lengüeta de montaje del panel del bastidor frontal dentro de los ganchos para bastidor hasta que encajen en su lugar haciendo "clic".

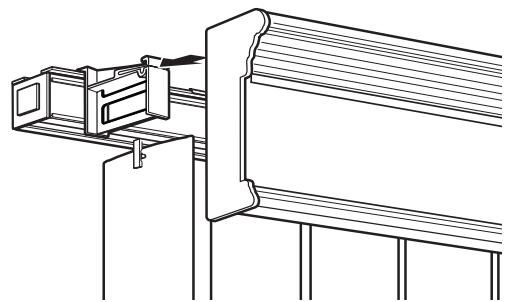

Bastidor Transicional


1A Conecte el bastidor al cortinero (instalación exterior)

- Centre el panel frontal con el cortinero.
- Deslice la lengüeta de montaje del panel del bastidor frontal dentro de los ganchos para bastidor hasta que encajen en su lugar haciendo "clic".

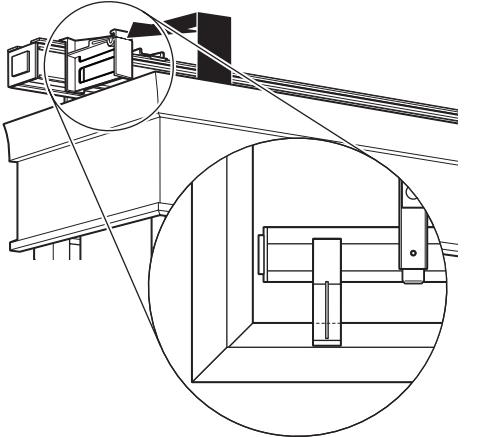

1B Conecte el bastidor al cortinero (instalación interior)


- Centre el panel frontal con el cortinero.
- Deslice la lengüeta de montaje del panel del bastidor frontal dentro de los ganchos para bastidor hasta que encajen en su lugar haciendo "clic".

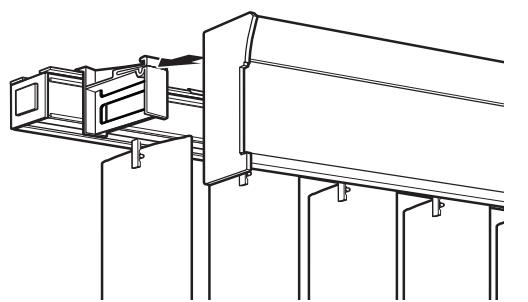

Bastidor Resemblance™


1 Instale los ganchos en el bastidor

- Instale un gancho de bastidor a 2" de cada extremo. Coloque los ganchos restantes de manera uniforme a lo largo del bastidor.
- Introduzca el gancho en la ranura ubicada en la parte trasera del bastidor y luego gire el gancho en 90°.

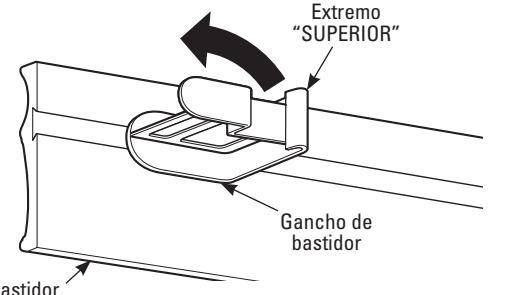


2 Conecte el bastidor al cortinero

- Ajuste los ganchos de bastidor en la parte frontal del cortinero. Asegúrese de que los ganchos entren en el reborde del canal como puede verse.

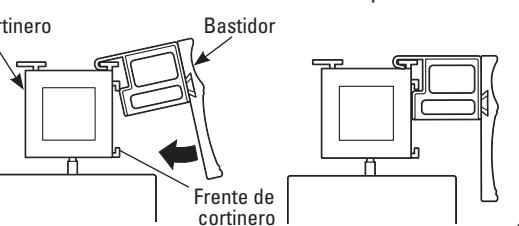

3 Conecte los retornos (instalación exterior)

- Deslice el soporte de retorno en "L" en el extremo angulado de cada retorno.

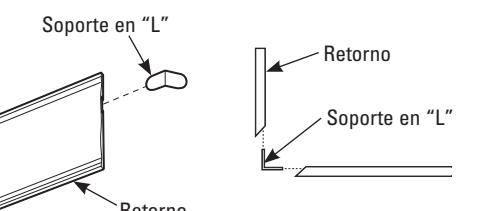

- Presione los retornos en su lugar en cada extremo del bastidor.

