



Aluminum Blind

Installation Instructions

Please follow these Installation Instructions

You will need a pencil, tape measure, drill, screwdriver, pliers, and appropriate fasteners.

Step 1: Choose the Correct Fastener

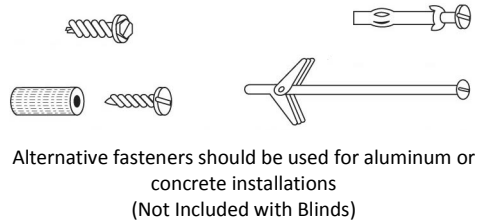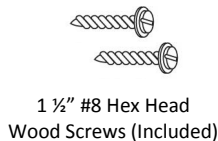

Step 2: Prepare Brackets



Installation Brackets

Use the following # of Installation Brackets based on the Blind Width:

Up to 60"

2

60 1/4" - 77 1/4"


3

77 1/4" and Greater

4


Step 3: Brackets Installation

Position the first two installation brackets along the mounting surface and at each end of the headrail. Each bracket should be set 2" from each end of the headrail. When using a third or fourth installation bracket if the width requires, center it between the end brackets. Make sure the brackets will not interfere with the cord mechanism or any other internal parts. Mark the bracket for mounting hole locations, making sure they are square and equally spaced. Screw brackets into wall or window jam as required. For outside mount installations, use a level to check for levelness.

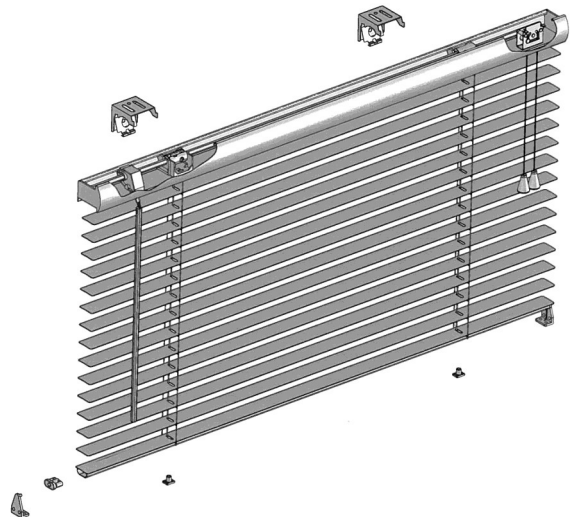

Step 4: Attach Hold Down Brackets

(Optional—Typically used for door installations)

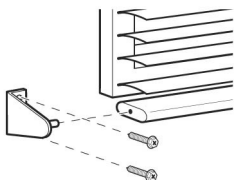

With the hold-down brackets attached to the bottom rail, lower the blind to the hold down bracket mounting surface and mark the bracket locations. Attach the hold down brackets at the bottom of the window or door with the included screws as shown. To attach the bottomrail, gently pull the brackets out slightly, and insert the pins into the holes on the bottomrail of the blinds.

Operating Instructions:

To lower the blind, pull the cord down and towards the center of the shade to unlock the cord. Then, slowly release the cord until the shade reaches the desired location. Move the cord past the outer edge of the shade and let go to lock the cord.

To raise the blind, pull the cord straight down until the shade reaches the desired location. Move the cord past the outer edge of the shade and let go to lock the cord.