

Custom Decorative Wood Cornice

Installation & Care



STEP 1 – YOUR NEW CORNICE

Thank you for your [Blinds.com](https://www.blinds.com) purchase. Your new cornice has been custom-crafted to your dimensions from the highest quality materials. Once installed, it will provide you with a lifetime of beauty.

INSTALLING your new cornice is easy! Simply follow our step-by-step instructions. We recommend you read through all the instructions before you start.

GETTING STARTED

Remove the cornice from the packaging. Check the diagram to make sure you have all parts.

TOOLS NEEDED

Pencil, Screwdriver, level, pliers, and a drill with a 1/8" drill bit.

Your brackets must be securely fastened to the mounting surface. The screws included must hit a wood stud. Otherwise use a secure fastener as illustrated below.

PLASTER or WALLBOARD (or no wood stud to install into)

Use a secure fastener designed for hollow wall applications.

METAL

Pre-drill holes and use the included screws.


CONCRETE, STONE, BRICK, TILE

Use a masonry drill and appropriate plugs (anchors or screws).


*When selecting a fastener, make sure it is designed to support the cornice.



STANDARD CORNICE
MOUNTING BRACKET

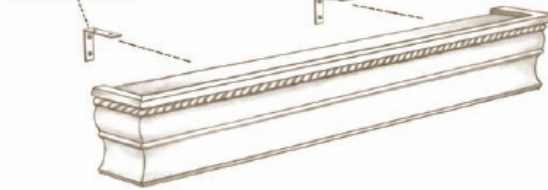

CORNICE WITH KEYSTONE
MOUNTING BRACKET

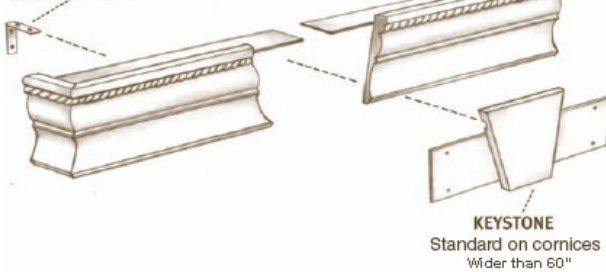

KEYSTONE
Standard on cornices
Wider than 60"


STEP 2 – CORNICE WITH KEYSTONE

(FOR STANDARD CORNICE - GO STRAIGHT TO STEP 3)

Turn both sides of the cornice and the keystone over onto their faces and lay on a flat surface. Slide the keystone onto one side of the cornice. When assembled, the dustcover top of the cornice should be in the channel in the back of the keystone. The bolt holes in the keystone and in the back of the cornice should align.

STEP 2A – ATTACHING KEYSTONE

Attach the Keystone to the cornice with the wing bolts provided.

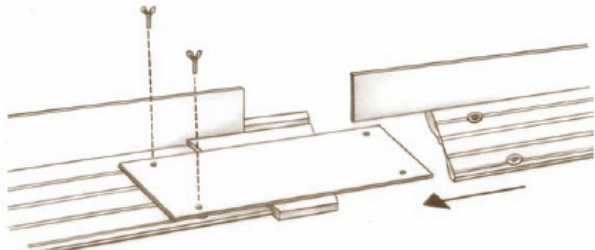


STEP 2B – ATTACHING SECOND SIDE

Follow the same procedure to attach the second side of the cornice.




STEP 2C – ASSEMBLED CORNICE

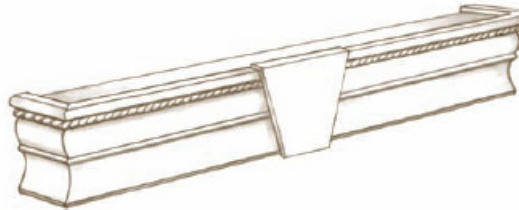

Proceed to Step 3

STEP 3 – ATTACHING BRACKETS

Center cornice over the window opening. Mark with a pencil the position of the ends of the cornice on the wall. Attach mounting brackets to the wall 3" in from the marks, at the desired height. Make sure the brackets are level.

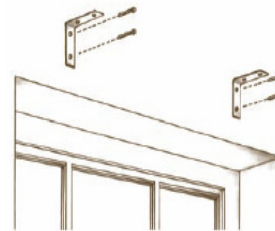

STEP 3A – MOUNTING CORNICE

Set the cornice on TOP of the brackets. Center the cornice over the window and against the wall. Attach the cornice with the short screws provided.

STEP 4 – CARE INSTRUCTIONS

Your new cornice is made from 100% North American Basswood and can be cared for like other wood furniture in your home.

- Dust with a soft, clean cloth
- Vacuum using the brush dust head attachment.
- Wash using a damp cloth and mild detergent solution. Use warm or cold water, not hot water.

STEP 4 – ENJOY

Your cornice is now installed. Take a moment to appreciate how it enhances the look of your room and truly brings all of your decorative elements together.