

Blinds.com Self Assemble Instructions for window screens:

Step 1- Lay out all pieces as pictured above:



Your kit will contain per screen

4each - corner inserts

1 each – piece rubber spline

1 each – screen cloth

1 each – spline roller (optional)

1 each – set of hardware (optional)


Step 2- Insert the corners into both ends of the 2 longest pieces of frame as seen in pictures below



Step 3 – If you ordered tension spring and pull tabs, slide the tension springs into the open mitre cut on the side of frame you want the spring to be. This should be the side of frame that will go into the screen channel of your window. It may be necessary to remove a corner insert to apply the spring. Then add the pull tabs to the end parallel to you springs.



Step 4- Take the two shorter pieces of frame and join together with the two longer pieces using a rubber mallet or something similar.

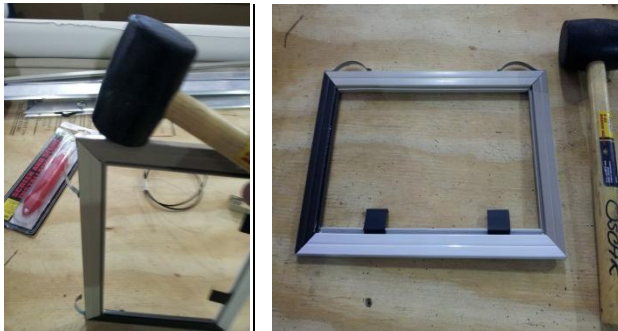

Step 5- Find your Rubber spline, screen cloth and screen roller. Place the cloth over the frame and roll it into the spline groove with the rounded smoothed edged plastic roller.



Step 6- Take your rubber spline and the CONCAVE side of your spline roller and roll the spline into the fabric that has been rolled into the spline groove, pulling the fabric tight as you go. After you have rolled the spline into all four sides of your screen and the screen has a nice firm but not too tight look, trim the excess material with a utility knife.



Step 7 – Your screen is now ready to be installed. IF you chose the tension spring method, insert the spring side of the frame into the screen channel of the window, push up and allow the screen to lift over the bottom lip of the window and then spring back down into place. If you choose the brick clip type install, slide the clips over the frame and push the screen into the brick or wood opening around the window. IF you choose to screw the screen onto your window, using the self tapping screws included in your kit and screw the screen to the window frame.

