

WARRANTY

All our products are guaranteed against defects on fabrics, materials and workmanship for two years from the date of purchase. The normal wear that colors tend to have over time is not covered by this warranty.

Any defect, malfunction or failure to perform caused by accidents, negligence, wind, flood, lightning, fire, hail, exposure to harmful chemicals, and other acts of nature are excluded from fabricator's warranty. Our company is not responsible for any installation charges or any damages caused by it.

WARNING

Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE.

- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens, and other furniture away from cords and bead chain. Children can climb furniture to get to cords.
- Attach tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks.



INSTALLATION MANUAL FOR

ROMAN SHADES



TOXA SYSTEM



Professional Blind Systems

6850 NW 74 ST
Miami, Florida 33166
Phone (305) 883-0008
Fax (305) 883-8441
www.pbssystem.com

Every Shade is specially manufactured to match your needs and fulfill them. In every order you will find additional to the shade, the necessary installation brackets and screws.



There are two positions that before installing our product you should know:

1. Swivel Open
2. Swivel Close




Ceiling Mount

1. Measure 3" from each end of the window and make a small pencil mark. Space any additional brackets evenly.



2. Place the bracket against the ceiling and using one of the screws provided, attach it to the ceiling. (Walls made in sheetrock are recommended to use anchors). For concrete use tapcons.

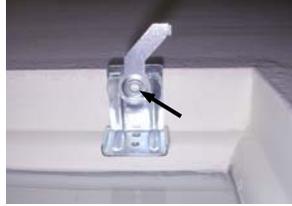


3. Place the headrail against the bracket with the swivel in open position. Then rotate the swivel to a close position. (Check that the headrail is being secured by the bracket).



Wall Mount

1. Mark with a pencil the desired length of the shade. Then measure 3" of the ends of the headrail. Space any additional brackets evenly.

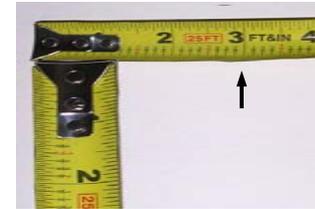

2. Place the bracket against the wall and using two of the screws provided, attach it to the wall.



3. Repeat step number 3 for Ceiling Mount.