



NO DRILL RAIL INSTALLATION INSTRUCTIONS

INSTALL FASTER. NO TOOLS. NO STRESS.

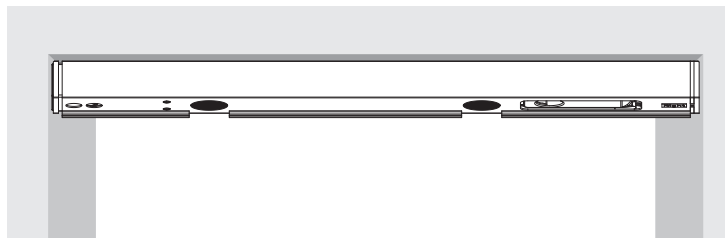

Components and Hardware



No Drill Rail



For Cellular shades




For Roller shades

Installation Bracket Connector

Refer to the product installation sheet for bracket quantity.

Step 1 PLACE IN WINDOW



Place rail inside frame and push firmly to the right.

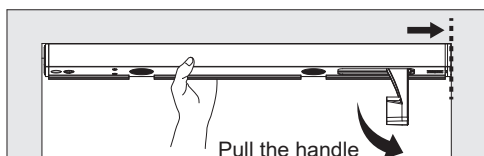

Pull the handle


Step 2 ADJUST TO FIT

Press the spring button at the non-handle end of the rail to let the side cover pop out against the frame.

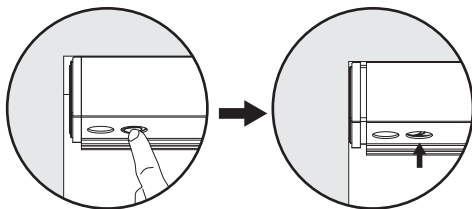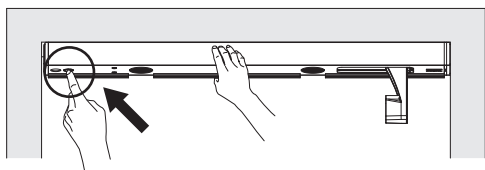

Step 3 LOCK IN PLACE


Press the handle down firmly to secure the rail.

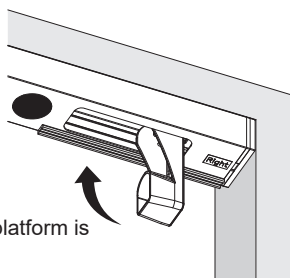

NOTE: Ensure the platform is level before locking.

Step 4 SNAP IN BRACKETS

Insert the bracket connectors into the rail until you hear a click.

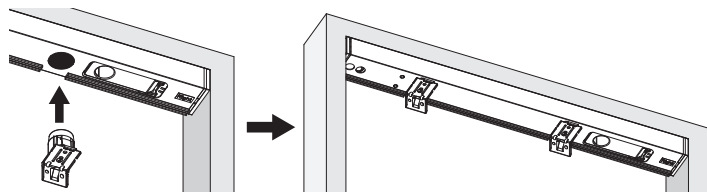


Step 5 INSTALL THE SHADE

Install your shade into the brackets to complete the setup.


★ Congratulations! ★

You have finished installing the No drill rail.

REMOVAL OF THE NO DRILL RAIL

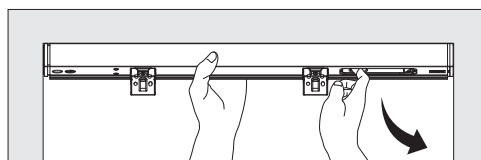


Pull the Handle

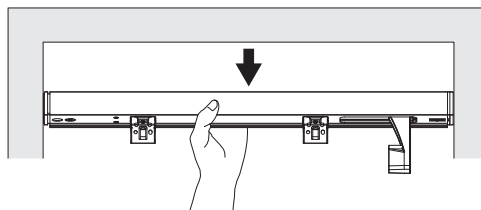

Trouble Shooting

If the left-side end cap pops out before installation, please use the tool to press the area indicated below and push the end cap until it is fully inserted.

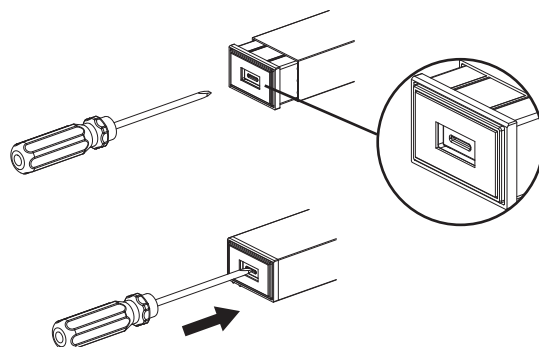

DISCLAIMER:

Choosing the no-drill option may affect the installed product's stability on window openings, if installed improperly, not following the installation instruction, misuse or abuse. By choosing this no-drill option, you specifically waive any product warranty associated with any issues, accidents, damages or injuries associated with this choice.