SimplyEco No Drill No Tool

M9

EZ Grip Installation Guide

No Drill Required For Installation



WHAT'S IN THE PACKAGE



A X 1
SHADE



B X 1
WRENCH

Missing part?
1-844-318-6168


SAFETY INFORMATION

Read and understand all instructions before you assemble.

5 STEPS QUICK INSTALLATION


1 Factory Preset Position

The shade (A) arrives with both nuts preset near the round plates. This position is important. If reinstalling, rotate nuts back to this position for proper setup.

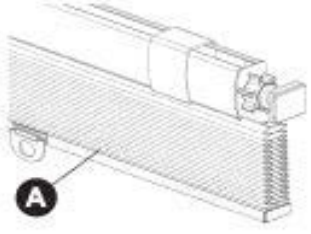

2 Insert into Window Frame


Press both ends of the mechanism and position the shade inside the window frame.

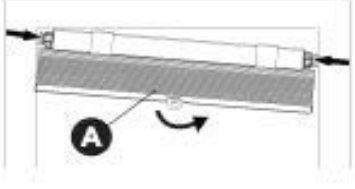

3 Hand-Tighten Both Sides

Hand-turn the nuts on both sides evenly:


- Left side: turn downward
- Right side: turn upward

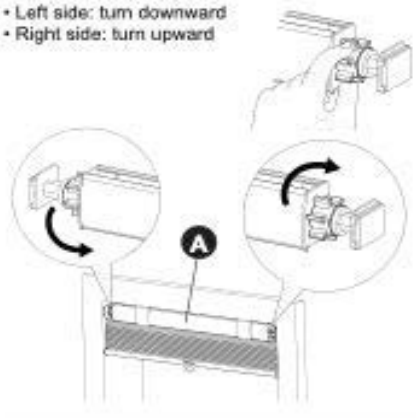

4 Final Wrench Tightening

optional step to be used if additional tightening is needed beyond thumb tight.

- Left side: turn downward
- Right side: turn upward

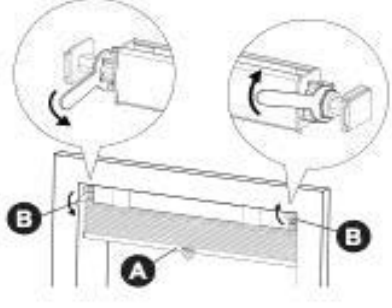

5 Slide Headrail Decorative Cover

Slide both headrail decorative cover to conceal the mechanism.

