

Motorization Size Considerations

Motorized Lift: Mounting Depth Illustrations


The following diagrams illustrate the mounting depth requirements for shades mounted inside window casements.

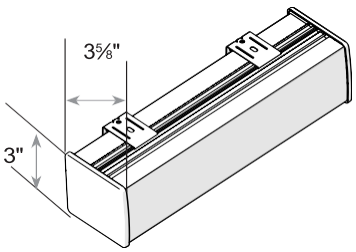


Small Square Cassette Valance
1⅜" Minimum Inside Mount

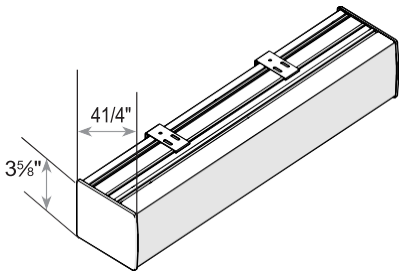


Medium Square Cassette Valance
1¾" Minimum Inside Mount

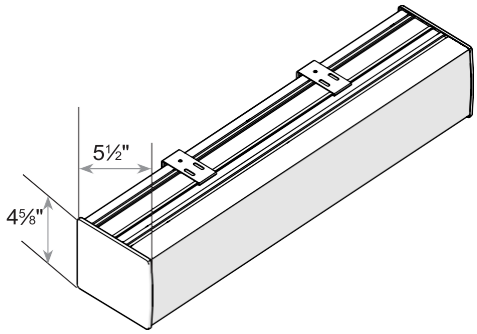


Large Square Cassette Valance
1¾" Minimum Inside Mount

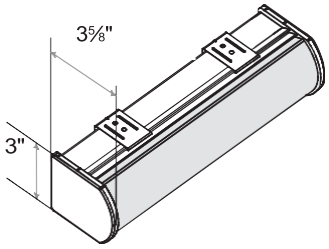


Small Round Cassette Valance
1⅜" Minimum Inside Mount

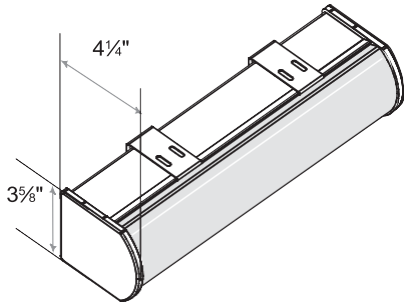


Medium Round Cassette Valance
1¾" Minimum Inside Mount

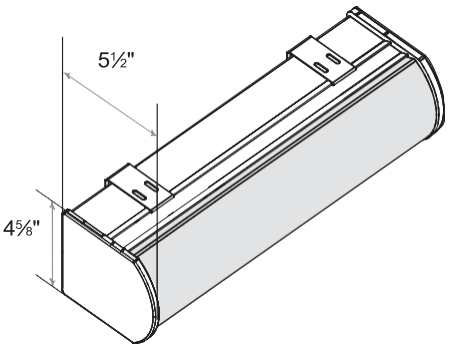


Large Dual Round Cassette Valance
1¾" Minimum Inside Mount

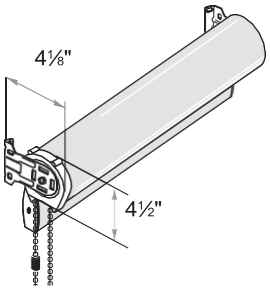


No Valance*
¾" Minimum Inside/Side Mount

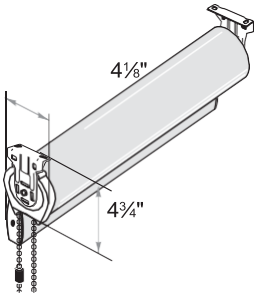

No Valance*
4⅛" Minimum Inside/Top Mount

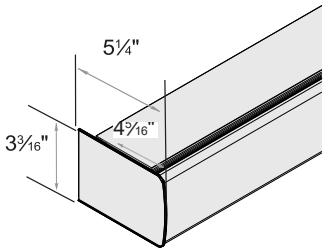

Contour Valance
2⁷⁄₁₆") Minimum Inside Mount
(return can be trimmed)

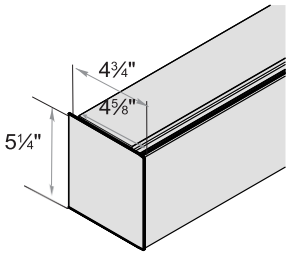

Flat Valance
2¹⁵⁄₁₆ Minimum Inside Mount
(return can be trimmed)