
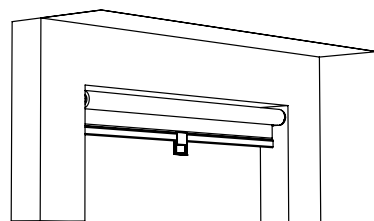


Spring Roller Shade

Installation Guide - Measurement instructions


Inside mount

Measure the opening width at top (A):

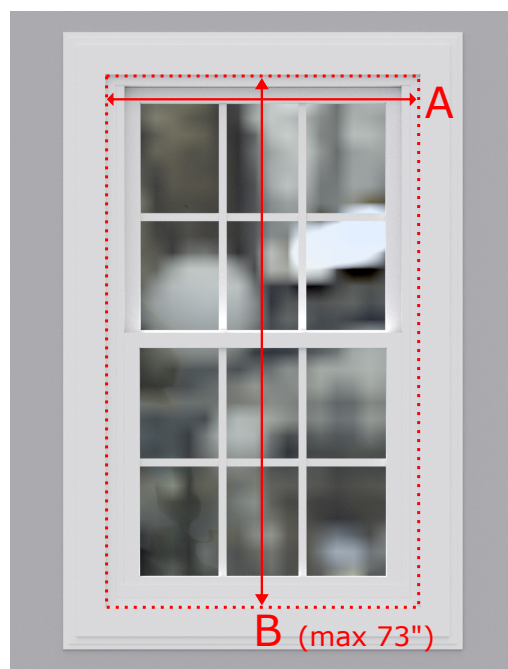

Outside mount

Measure the width from edge to edge of window molding (A):

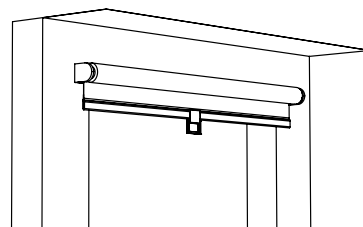

Inside mount

Measure the window opening width at the top rounded down to the closest 0.5". The depth of the window frame must be at least 1.5" for inside mount.

Outside mount

Measure window molding width to the closest 0.5". If preferred the shade can also be installed on the wall above the molding.

The **maximum height** of the iFit shade is 73".